
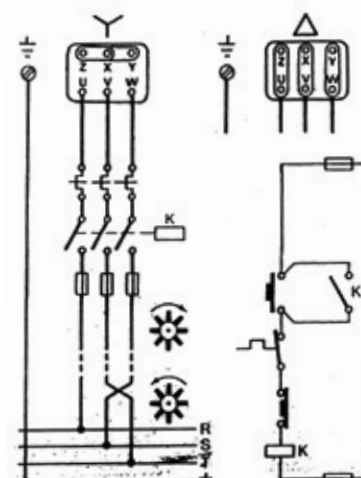


HP 400V



! PAZNJA:
Pre povezivanja u YΔ proveriti napon(V) struje na pločici ventilatora.
Obavezno ugraditi termicku zaštitu.

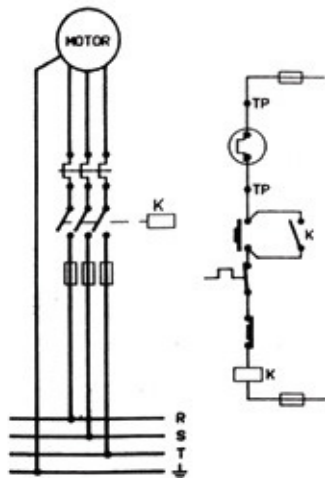

POVEZIVANJE MOTORA 220V OD 0.5 DO 1.5HP SA REB-5000W

MP=N=Nula
Ph=L=Faza

! PAZNJA:
Podesiti reostat na minimum
60% vrednosti napona struje.

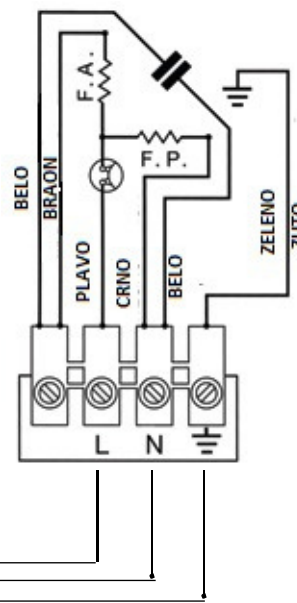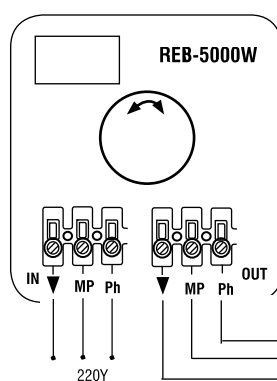

! PAZNJA: Pre pustanja ventilatora u rad **OBAVEZNO** izmeriti amperazu i staviti potrebnu zaštitu/osigurac.

Kontakt telefon

Tel/Fax +381 11 260
5459 Tel +381 11 311
8924
Mob +381 60 5720 776

Antifašističke borbe 15/lok.25
Novi Beograd
Email: office@ventilacija.rs

